


Installation

- ☐ Predrill Pilot holes, then glue (not provided).
- ☐ Insert Dry wall screws and wooden Plugs (provided).




New Dutch Door Shelf ships loose.
 Shelf goes to the exterior.
 Bore 5" down to accommodate shelf.
 3/0 doors use a 2-10 shelf and 2/8 doors use a 2-6 shelf.
 For different sizes call for quote.

Dutch Door HANDING




LH Swing In

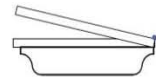

RH Swing In



RH Swing Out




LH Swing Out



Please specify Swing-In or Swing-Out.



Standard

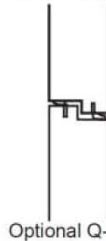

Optional Q-Lon
 (Specify White or Bronze)

Aline shelf even with bottom half of Dutch Door.

