


## Installation


- ❑ Predrill Pilot holes, then glue (not provided).
- ❑ Insert Dry wall screws and wooden Plugs (provided).



New Dutch Door Shelf ships loose.  
Shelf goes to the exterior.  
Bore 5" down to accommodate shelf.  
3/0 doors use a 2-10 shelf and 2/8 doors use a 2-6 shelf.  
For different sizes call for quote.

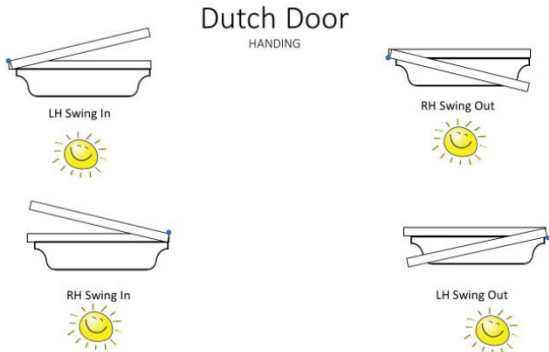

Please specify Swing-In or Swing-Out.

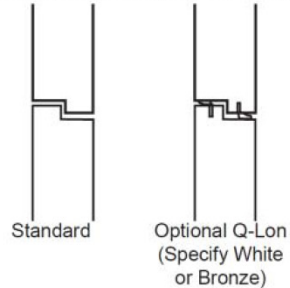

Align shelf even with bottom half of Dutch Door.

