


For any unit that *is* or that *contains* an **INSWING** Casement with a **FIXED** Sash (O, X/O, O/X, X/O/X, X/O/O, O/X/O, etc.):

BEFORE Window Unit can be installed:

1. Remove sash from frame (1a.) by removing the screws that fix the sash to the frame (see images below).
2. Remove the interior Stool by removing the screws located along the top of the stool (see *right* image below).

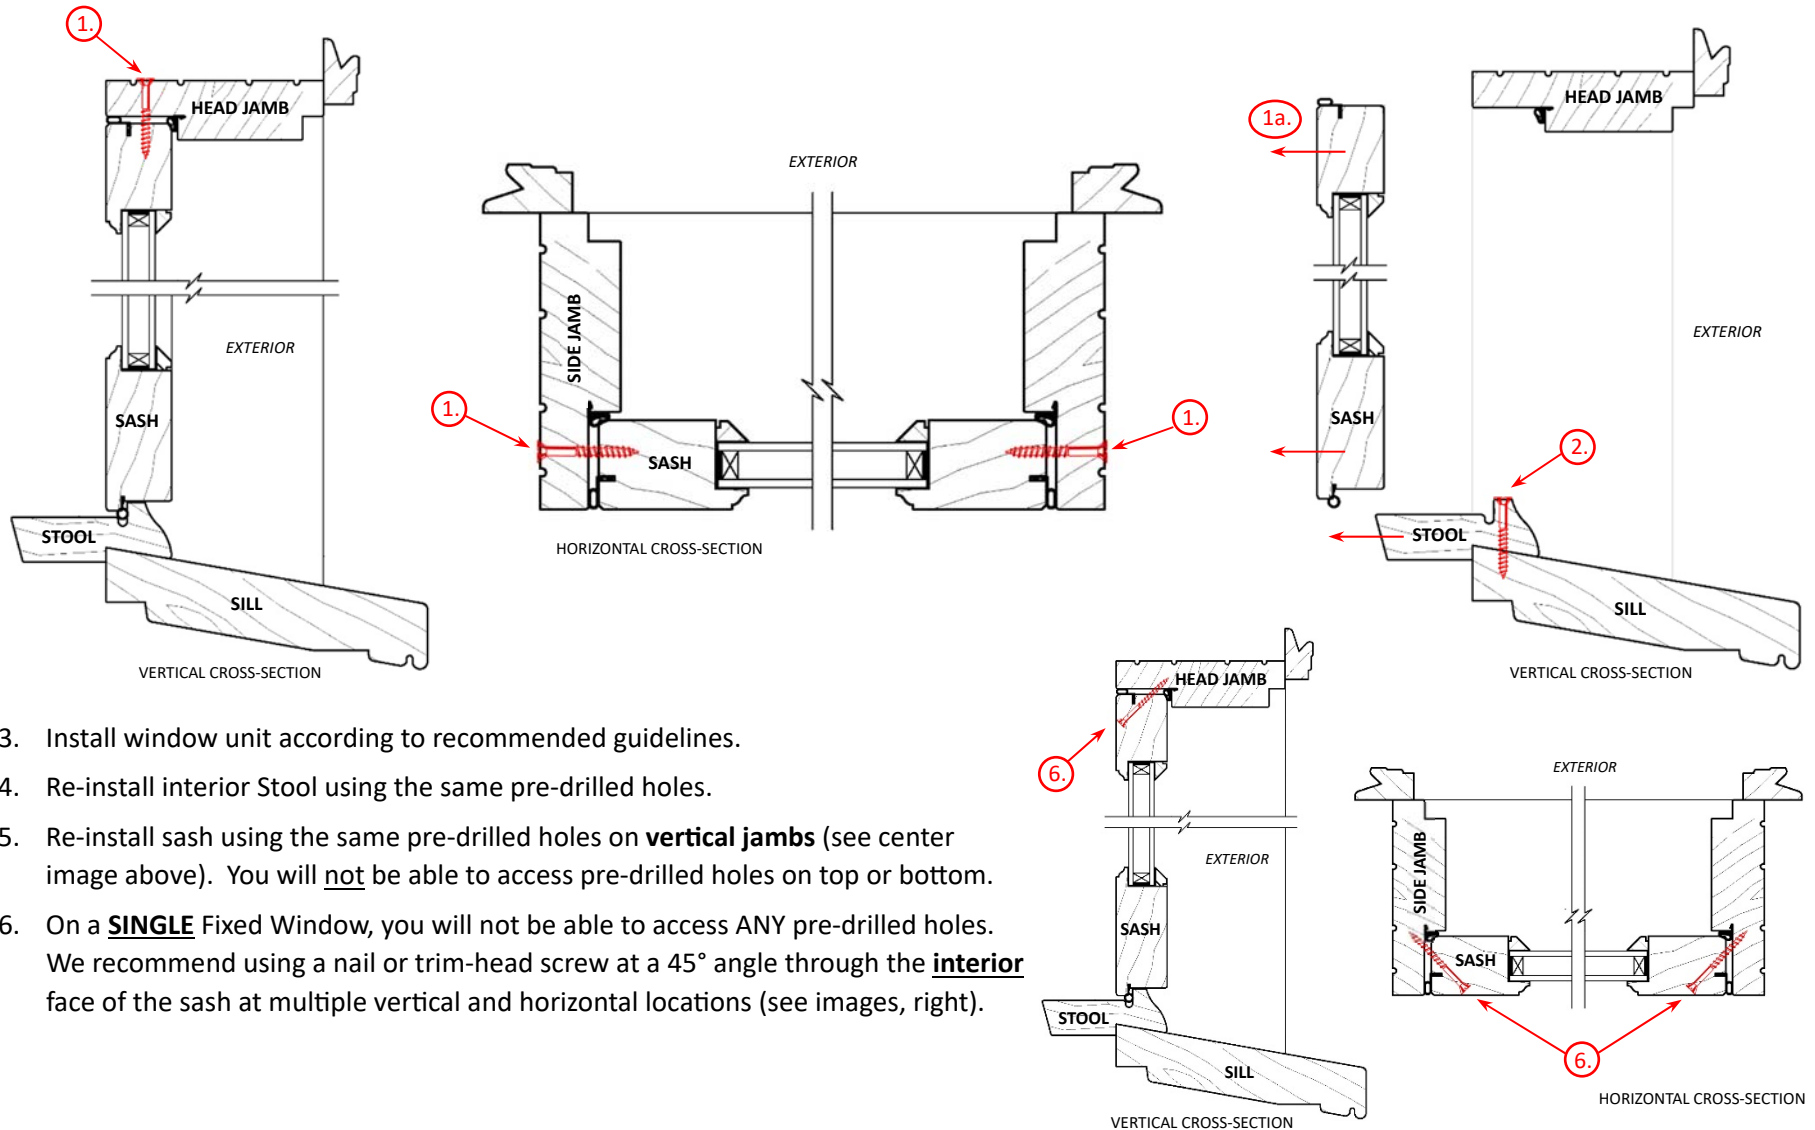

3. Install window unit according to recommended guidelines.
4. Re-install interior Stool using the same pre-drilled holes.
5. Re-install sash using the same pre-drilled holes on **vertical jambs** (see center image above). You will not be able to access pre-drilled holes on top or bottom.
6. On a **SINGLE** Fixed Window, you will not be able to access ANY pre-drilled holes. We recommend using a nail or trim-head screw at a 45° angle through the **interior** face of the sash at multiple vertical and horizontal locations (see images, right).